


# ProTect Spray Booth Liner

Specialty Product

### Before Application

1. It is very important to ensure that the spray booth walls are clean, even if you have a new booth or if it has been recently painted. The adhesive film will not stick to dirt and dust. A fine grit sanding disc can be used to prepare the surface prior to application, especially if the panels are covered with paint or dirt.
2. To open the box, cut along all four sides of one face to expose the roll of ProTect. Also remove the polythene liner. The roll is now ready to use from the box. The roll will revolve on the plastic end bungs. The tacky side of the film should face the wall panel.

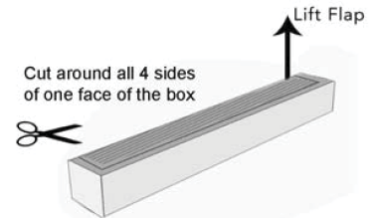

### Applying ProTect Spray Booth Liner

1. ProTect Spray Booth Liner is hung in a vertical manner like wallpaper. We recommend that two people apply this product; however, it can be done by one person.
2. Pull off a length of the spray booth liner and position it at the top of the spray booth wall. It can be slightly over sized and trimmed later. Smooth material to the top of the wall with a squeegee. The box will hold the bottom of the material away from the wall until you are ready to smooth the rest down and trim it.
3. Working from the top downward and to the side, use the squeegee to firm down the rest of the spray booth liner and to remove any air bubbles. There may be some bubbling, but this is normal and will not affect the performance of the product.
4. Upon reaching the bottom, hold the bottom of the strip away from the wall panel and cut it slightly over-length. Slide the box out of the way and smooth the rest of the strip down to the wall. The top and bottom can now be cut to size.
5. Carefully peel away the release liner exposing the special capture adhesive. To help get the release liner started, fold over a small corner at the top so that the adhesive sticks to itself. The release liner can then be picked off with a blade or nail to get it going. Roll up the release liner as you peel it away and dispose of it.
6. Apply the next strip in the same way, overlapping it on the previous strip of material that has already had the release liner removed. We suggest an overlap of up to 50 millimeters (1.96"). This will aid in removal of the spray booth liner when it is time to replace.
7. Repeat the application steps around the booth until the whole spray booth wall surface is covered.
8. One application of ProTect Spray Booth Liner can be used for up to 1,000 hours of bake time depending upon the amount of dust and overspray in the booth. To remove the liner, simply peel it away from the wall starting with the last strip applied. The overlapping strips will help the liner come off easily.



Visit [www.drytac.com](http://www.drytac.com) to watch an application demonstration video.

# ProTect Spray Booth Liner

Specialty Product

## Physical Characteristics

Film Thickness	23 $\mu$ (0.9 mil)
Adhesive Heat Resistance	Up to 80°C (176°F)
Roll Size	1040mm x 100m (41" x 328')

### IMPORTANT NOTE:

Information is intended only as a guide and is given without guarantees. Purchasers should independently determine, prior to use, the suitability of each material for their specific purpose. Follow the indications on the package, ask for the safety data sheets and always follow the indications contained therein.

Only the correct use of the product will allow satisfactory results. For this reason, Drytac is not responsible for improper use of the product, either by application or substrate applied to. Make certain that product is right for the desired use, and work according to the instructions given in our technical data sheets. If in doubt of the appropriate application methods or use, contact Drytac at one of the phone numbers listed below.