


The Accordion

How to Cut a Baffle to Length

Equipment needed: tape measure and sharp knife

1. Measure the length of the exhaust opening, if unknown.
2. Count a red mark for each foot (or meter). Ex.: if the exhaust bank is 10' long, count 10 marks.
3. Slide knife under the pleat and cut.

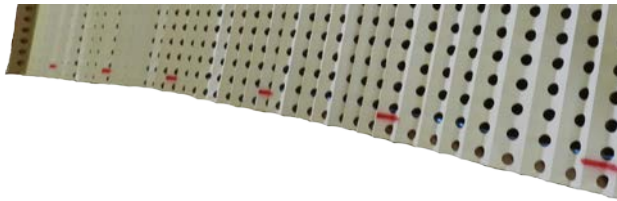

Tips to make the cut easier:

1. Use a sharp knife. Point the tip of the knife down towards the table or floor.
2. Pinch the bottom pleats on either side of the knife to start the cut.



3. Pinch the top pleats after cut has started to guide knife.
4. When cutting a Poly-Back, wipe the knife blade on a rag sprayed with WD40 before making the cut; the blade will glide through the polyester backing.
5. Bunch the polyester overhang to the baffle edge before sliding knife under the pleat.

